

RDM---Remote Device Management

RDM is a wild version of the DMX512-A protocol, allowing dimming stations and other control devices to be discovered through a DMX512 network, and then configuring, status monitoring, and managing intermediate and line end devices.


It allows two-way communication between the lighting device or system controller and the connected RDM compatible device through the standard DMX. This protocol will allow these devices to be configured, monitored, and managed in a manner that does not interfere with the normal operation of standard DMX512 devices that do not recognize the RDM protocol.

Allow a controller or test device to find other devices that can be RDM, such as computer lights or dimming cabinets, and remotely manage them through this connection intelligence. Including the ability to remotely set the initial address of the DMX512, query the device's errors or statistics, and achieve most of the configuration settings that are usually done on the front panel of the device. RDM can run with the new RDM device or any original DMX512 product on the same data link without any performance impact. Since RDM runs on the first team DMX512 link, the only infrastructure upgrade required by RDM is to upgrade the existing data distributor to implement a two-way mode to support RDM.

The RDM information is transmitted through the first pair of DMX512 data channels. RDM uses packets that include non-zero initial codes to start and control communications. This alternating(rotating) session and waiting for indicative responses is performed in a semi-duplex format. The second data pair is not used for any RDM function.

Two-way data transmission-each vendor's equipment can exchange data, Art-net can only transmit data, can not exchange with each other.


Its functions are as followed:

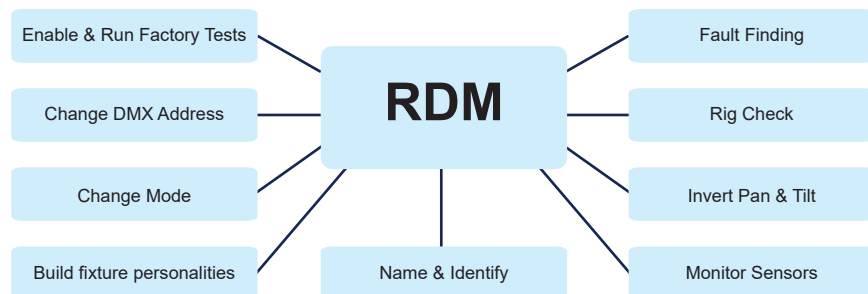


CYCLOPS
LIGHTING

CPX1800B-06

12X15 watts RGBW pixel control light

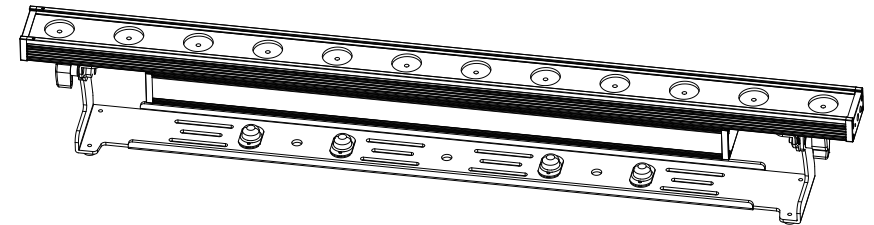


Product Overview

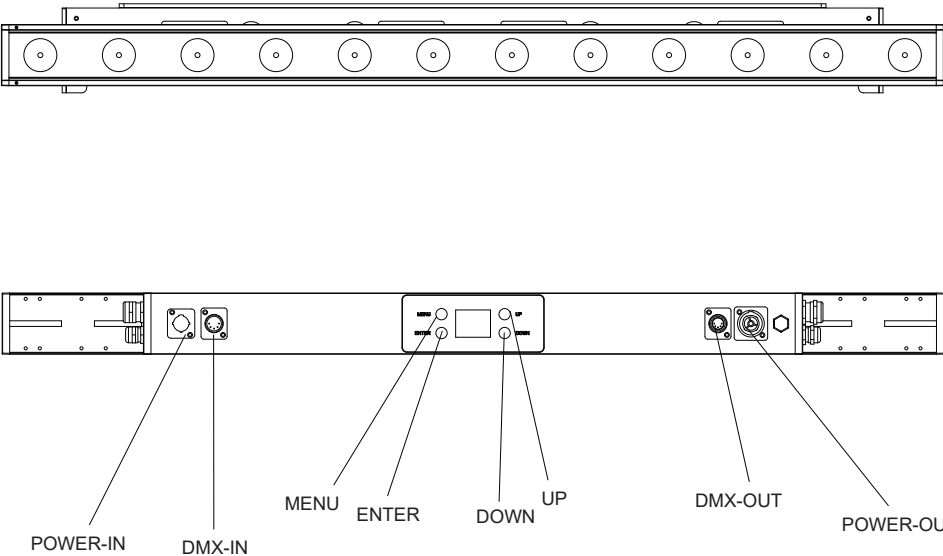

CABLE CONNECTORS

Cabling must have a male XLR connector on one end and a female XLR connector on the other end.

DMX connector configuration

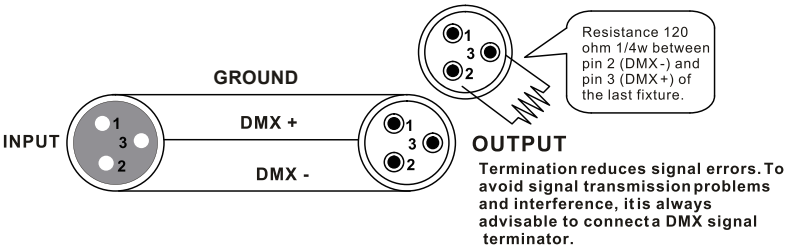

caution: Do not allow contact between the ground and the fixture's chassis ground. Grounding the ground can cause a ground loop, and your fixture may perform erratically. Test cables with an ohm meter to verify positive pole and to make sure the pins are not grounded or shorted to the shield or each other.

3-PIN TO 5-PIN CONVERSION CHART

Note! If you use a controller with a 5 pin DMX output connector, you need to use a 5 pin to 3 pin adapter. The chart below details a proper cable conversion:


3-PIN TO 5-PIN CONVERSION CHART		
Conductor	3 Pin Female (output)	5 Pin Male (Input)
Ground/Shield	Pin 1	Pin 1
Data (-) signal	Pin 2	Pin 2
Data (+) signal	Pin 3	Pin 3
Do not use		Do not use
Do not use		Do not use

Mounting

When installing the unit, the trussing or area of installation must be able to hold 10 times the weight without any deformation. When installing the unit must be secured with a secondary safety attachment, e.g. and appropriate safety cable. Never stand directly below the unit when mounting, removing, or servicing the unit.



Overhead mounting requires extensive experience, including calculating working load limits, installation material being used, and periodic safety inspection of all installation material and unit. If you lack these qualifications, do not attempt the installation yourself.

The installation should be checked by a skilled person once a year.

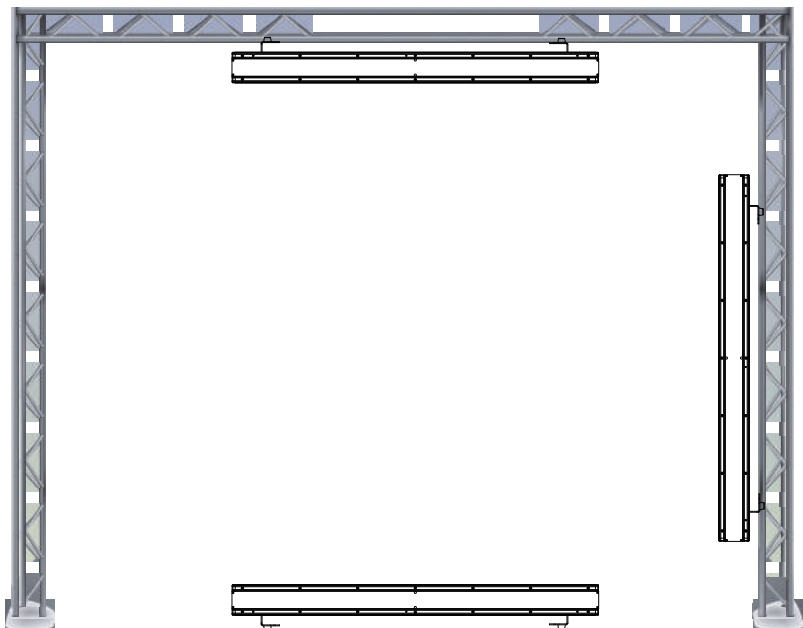

The CPX180OB-06 is fully operational in three different mounting positions, hanging upside-down from a ceiling, set on a flat level surface or mount the unit on its side. Be sure this fixture is kept at least 0.5m away from any flammable materials (decoration etc.). And you'd better use and install the supplied safety cable as a safety measure to prevent accidental damage and/or injury in the event the clamp fails (see next page).

Mechanical Specification

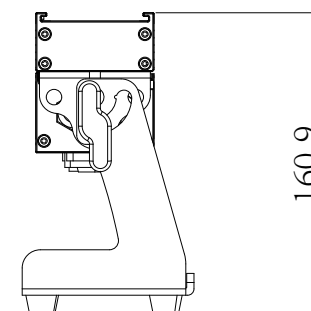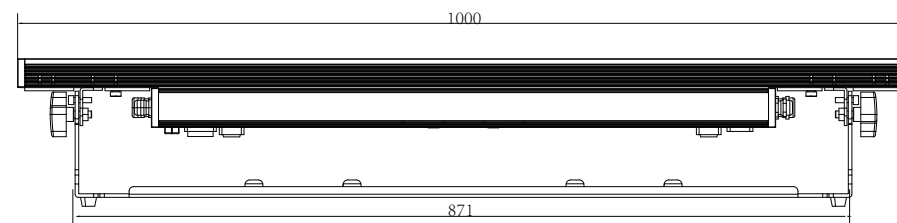

Packaging: Thanks for your purchasing the CPX180OB-06. All the lights have been checked and are in excellent operating condition. Please check the shipping carton first. Because there maybe damage occurred during the shipment. Then check the lights carefully and be sure that the light is intact and works normally. In the event damage has been found, spare parts are missing or the lights works abnormally, please contact us for further instructions. And please don't return the light to the dealer before contacting us.

Introduction:The CPX180OB-06 has four operating modes: DMX mode, Auto mode, Master/Slave and Sound mode. And the light has seven DMX channel. DMX channel is including 3 channel, 7 channel, 11 channel, 48 channel and 52 channel. You can see 13 kinds of shows when you open the Auto mode .All then all the lights in Master/Slave mode will run following the one in Auto mode. Using fog or special effect smoke, you can see better showing effect.

Warning!

1. For the sake of preventing the risk of electrical shock or fire.
2. Don't look directly at the opening lights all the time, or it may damage your eyes.

INFORMATION-In this menu, you can learn about the information of RDM, working time,software and hardware of the light.

- 1.Press "ENTER" and then press "UP" or "DOWN" to "INFORMATION".
- 2.Press "ENTER" and you can see 3 items as below:
 - 1) RDM - It shows the RDM of information.
 - 2) Hardware - It shows the Hardware of information.
 - 3) Software - It shows the Software of information.
 - 4) Working time - It shows the Working time of information.

FACTORY RESET-In this menu, you can reset all the value of the system.

1. Press "ENTER" and then press "UP" or "DOWN" to "FACTORY RESET".
2. Press "ENTER" to reset all the values of the system.

DMX MODE-In this menu,you can connect several pieces of lights with DMX cable and control them with the control console.

Press "ENTER" and then press "UP" or "DOWN" to "Address" or "DMX Channel" and press "ENTER".

1) "XXX" will be showed in "Address", "XXX" means the Address 001-512. You can press "UP" or "DOWN" to select the address you desired.

2) "Channel [xx]" will be showed in "DMX Channels", "XX" means 5 kinds of DMX Channels Modes.

You can press "UP" or "DOWN" to select the Channel Mode you desired.

DIMMER CURVE-In this menu,you can choose the mode you desired.

1. Press "ENTER" and then press "UP" or "DOWN" to "Dimmer Curve" to choose as below modes.

2. Press "ENTER" you can see 4 items as below:

- 1) Standard
- 2) Stage/TV
- 3) Architec
- 4) Theatre

DMX STATE-In this menu,you can choose the DMX signal you desired.

1. Press "ENTER" and then press "UP" or "DOWN" to "DMX STATE".

2. Press "ENTER" and you can choose "BLACKOUT" or "DMX HOLD"; "BLACKOUT" means cut off the DMX signal and "DMX HOLD" means connect DMX signal.

SLAVE MODE-In this menu, you can choose one light as the MASTER light and other lights in SLAVE Mode will run follow the MASTER light.

1. Press "ENTER" and then press "UP" or "DOWN" to "SLAVE Mode".

2. Press "ENTER" and "SLAVE" will be showed, then press "ENTER" to choose.

AUTO MODE-In this menu, you can choose your desired AUTO Mode and adjust the running speed.

1. Press "ENTER" and then press "UP" or "DOWN" to "AUTO MODE".

2. Press "ENTER" you can see 2 items as below:

- 1) SPEED - It provides "01-31" for you choose.
- 2) AUTO MODE - It provides "AUTO 1- AUTO 13" for you choose.

Manual Mode-In this menu,you can choose the modes you need.

1. Press "ENTER" and then press "UP" or "DOWN" to "AUTO MODE".

2. Press "ENTER" you will see the following items:

- 1) RED
- 2) GREEN
- 3) BLUE
- 4) WHITE
- 5) COLOR - You can choose "1-63" in this menu.
- 6) STROBE - You can choose "0-20" in this menu

CTO-In this menu, you can choose the brightness you desired.

1. Press "ENTER" and then press "UP" or "DOWN" to "CTO".

2. Press "ENTER" and then you have a choice of brightness from 2700K to 8000K.

SET UP-In this menu, you can adjust the values of the function.

1. Press "ENTER" and then press "UP" or "DOWN" to "SET UP".

2. Press "ENTER" and there has 6 options then press "ENTER" to choose the options and press "UP" or "DOWN" to choose the value you desired as below:

1) Key Lock - You can choose "OFF" or "5S" mode.

2) You can choose the mode "ON" or "30S". When you select "ON", the display screen will not turn off. When you select "30S", the display screen will turn off after 30S.

3) Max temp - You can set the your desired Max working temperature of the light with passcode in this menu. When the working temperature beyond max temperature of default settings, the color of letter "Temp XX" will show the color from white to yellow. Meanwhile, the light will adjust the working temperature automatically.

4) Dimmer ALL - You can adjust the brightness of color in this menu.


5) White balance - You can adjust the values of red, blue, green and white.

Features


- Light Source: 12pcs*15W, RGBW 4 in 1 LED
- Beam angel: 6 °
- Power consumption: 140W
- DMX channels: 3, 7, 11, 48 & 52CH
- DMX and RDM is available.
- Power in and out:Seetronic IP65 true 1 power input and output;
- DMX in and out:Seetronic IP65 XLR input and output
- Fix installation:IP65 power in and out cable.IP65 DMX in and out cable.
- Four button with TFT LED displayer
- Body angel: 0 to 90°
- Optional accessory: frost filter,Barndoor,and Shell frost filter for rainbow effect.
- Bracket: Stage use-One bracket with omega lock.Fix installation-Two bracket on the two side with body angel direction.
- Temperature protection
- Aluminium body and die-cast cover.Anti UV and salt coat painting.
- CCT: 2700K - 8000K
- CRI: 84
- Waterproof: IP65
- Product dimension: 1000mm(L)* 94.5mm(W)* 160.9mm(H)
- NW:5.4 KG

Accessory

- | | |
|---|-------------------|
| ① Barndoor x 1 (purchase separate) | ④ DMX Cable x 1 |
| ② Magnetic frost filter x 1 (purchase separate) | ⑤ User manual x 1 |
| ③ Power Cable x 1 | ⑥ Fast lock x 2 |

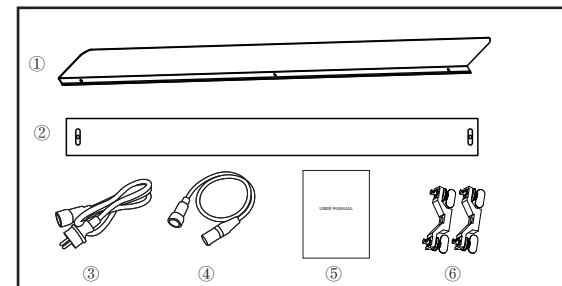


Displayer introduction

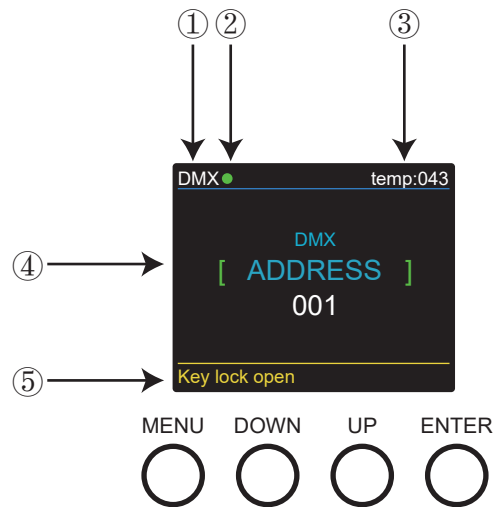

1. DMX means the light is in the DMX mode. Similarly, SLAVE means the light is in the SLAVE mode.
2. The color of the point shows the condition of signal transmission. Green represents the good condition, while red represents the signal is interrupted.
3. The item shows the working temperature of the light. When the working temperature exceeds the max temperature, the color of the letters and number will change from white to yellow.
4. This item shows the menu you selected.
5. This item shows the condition of key lock. "Key lock open" means the key lock is open. And "Key lock off" means the key lock is close.

Update software via DMX cable

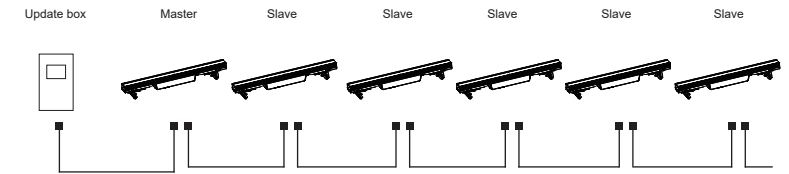

First, set the first one light in Master mode, the other lights in Slave mode, then connect with DMX cable.


Second, connect the power for updater box, and choose the software, then the updater box connect with the first one light (Master), the background will be shown grey color.


Third, press the ENTER button, and the display shows "wait", a few seconds, shows "loading" and change to other color. It means uploading, a few minutes, upload success will be shown. All the programs edited in the Master light will be uploaded to the Slave lights.

MODE 48 CHANNELS		
Channel	Value	Function
1	000 - 255	Led1 Red
2	000 - 255	Led1 Green
3	000 - 255	Led1 Blue
4	000 - 255	Led1 White
5	000 - 255	Led2 Red
6	000 - 255	Led2 Green
7	000 - 255	Led2 Blue
8	000 - 255	Led2 White
9-12	000 - 255	Led3 RGBW
13-16	000 - 255	Led4 RGBW
17-20	000 - 255	Led5 RGBW
21-24	000 - 255	Led6 RGBW
25-28	000 - 255	Led7 RGBW
29-32	000 - 255	Led8 RGBW
33-36	000 - 255	Led9 RGBW
37-40	000 - 255	Led10 RGBW
41-44	000 - 255	Led11 RGBW
45-48	000 - 255	Led12 RGBW

MODE 52 CHANNELS		
Channel	Value	Function
1	000 - 255	Dimmer
2	000 - 255	Dimmer Curve1-4
3	000 - 255	Auto 1-13
4	000 - 255	speed slow -fast
5	000 - 255	Led1 Red
6	000 - 255	Led1 Green
7	000 - 255	Led1 Blue
8	000 - 255	Led1 White
9	000 - 255	Led2 Red
10	000 - 255	Led2 Green
11	000 - 255	Led2 Blue
12	000 - 255	Led2 White
13-16	000 - 255	Led3 RGBW
17-20	000 - 255	Led4 RGBW
21-24	000 - 255	Led5 RGBW
25-28	000 - 255	Led6 RGBW
29-32	000 - 255	Led7 RGBW
33-36	000 - 255	Led8 RGBW
37-40	000 - 255	Led9 RGBW
41-44	000 - 255	Led10 RGBW
45-48	000 - 255	Led11 RGBW
49-52	000 - 255	Led12 RGBW

Programme Menu

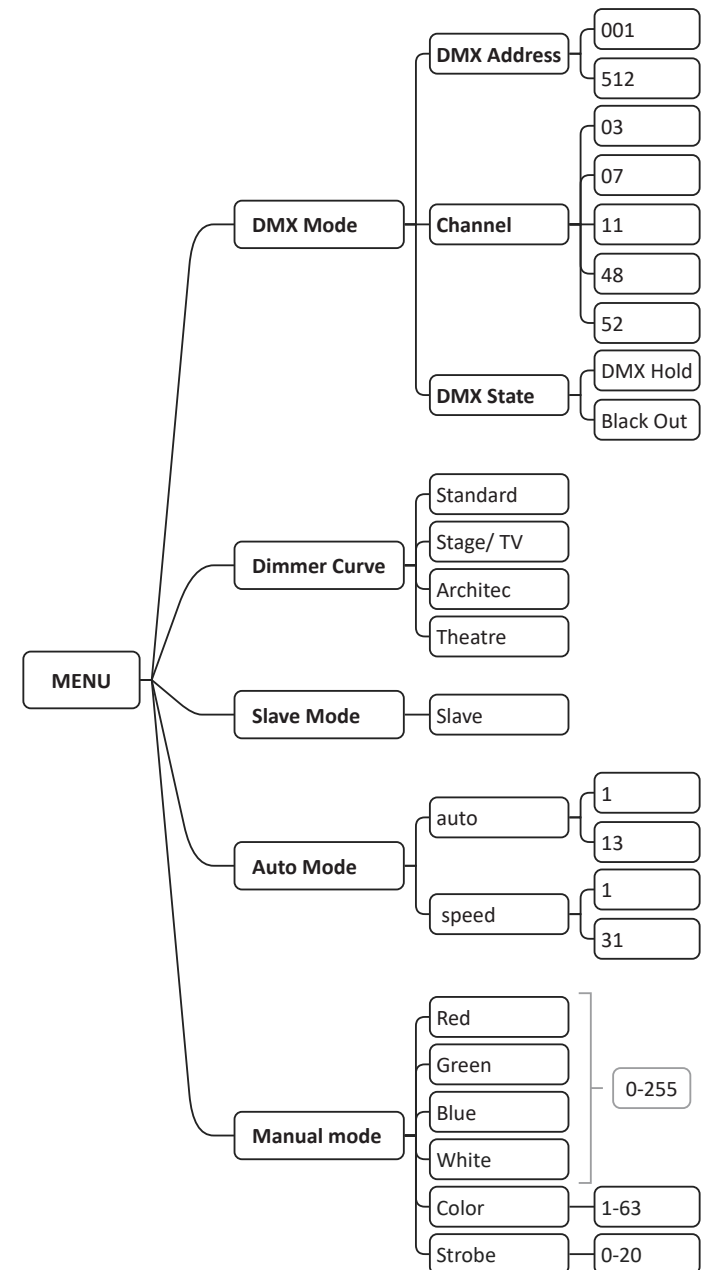

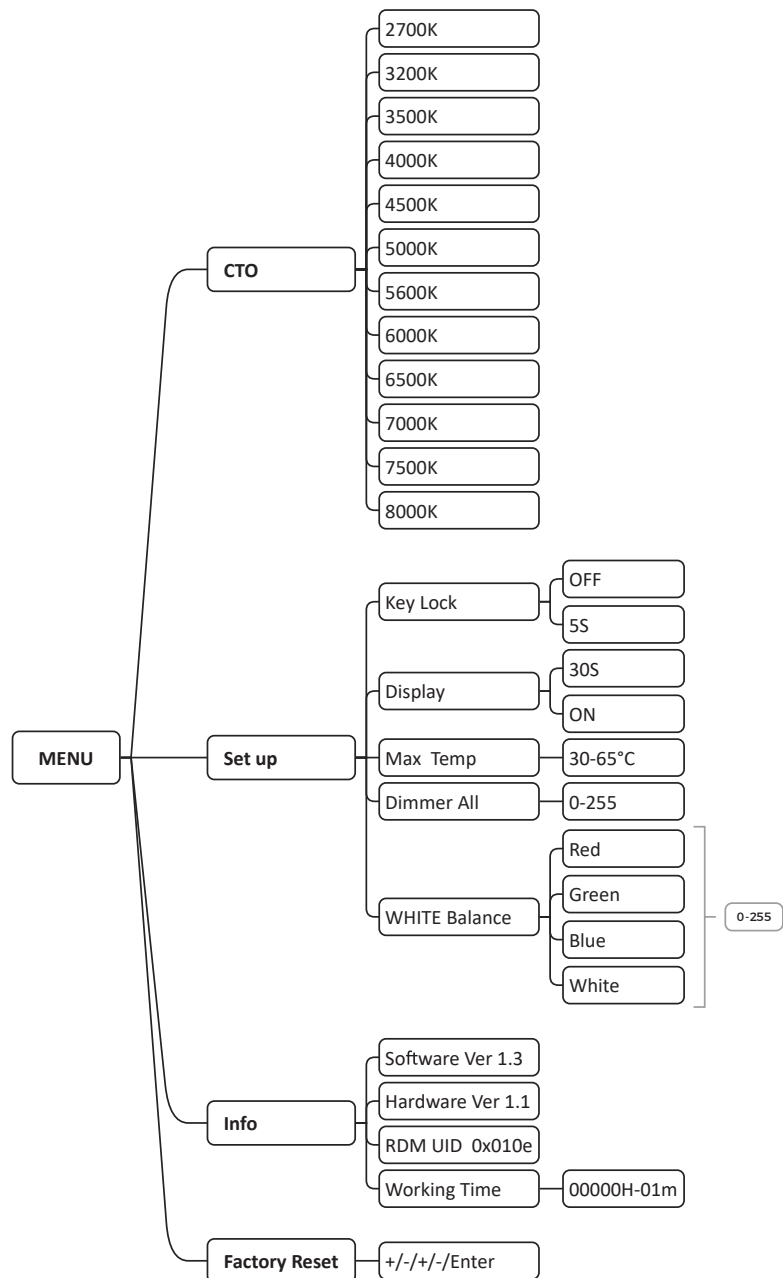

DMX control mode

MODE3 CHANNELS		
Channel	Value	Function
1	000 - 255	HUE
2	000 - 255	Saturation
3	000 - 255	Value

MODE 7 CHANNELS		
Channel	Value	Function
1	000 - 255	Dimmer
2	000 - 255	Dimmer Curve1-4
3	000 - 255	Red
4	000 - 255	Green
5	000 - 255	Blue
6	000 - 255	White
7	000 - 255	Strobe

MODE 11 CHANNELS		
Channel	Value	Function
1	000 - 255	Dimmer
2	000 - 255	Dimmer Curve1-4
3	000 - 255	Red
4	000 - 255	Green
5	000 - 255	Blue
6	000 - 255	White
7	000 - 255	Strobe
8	000 - 255	color
9	000 - 255	CCT
10	000 - 255	Auto 1-13
11	000 - 255	speed slow -fast